



中野インターチェンジ

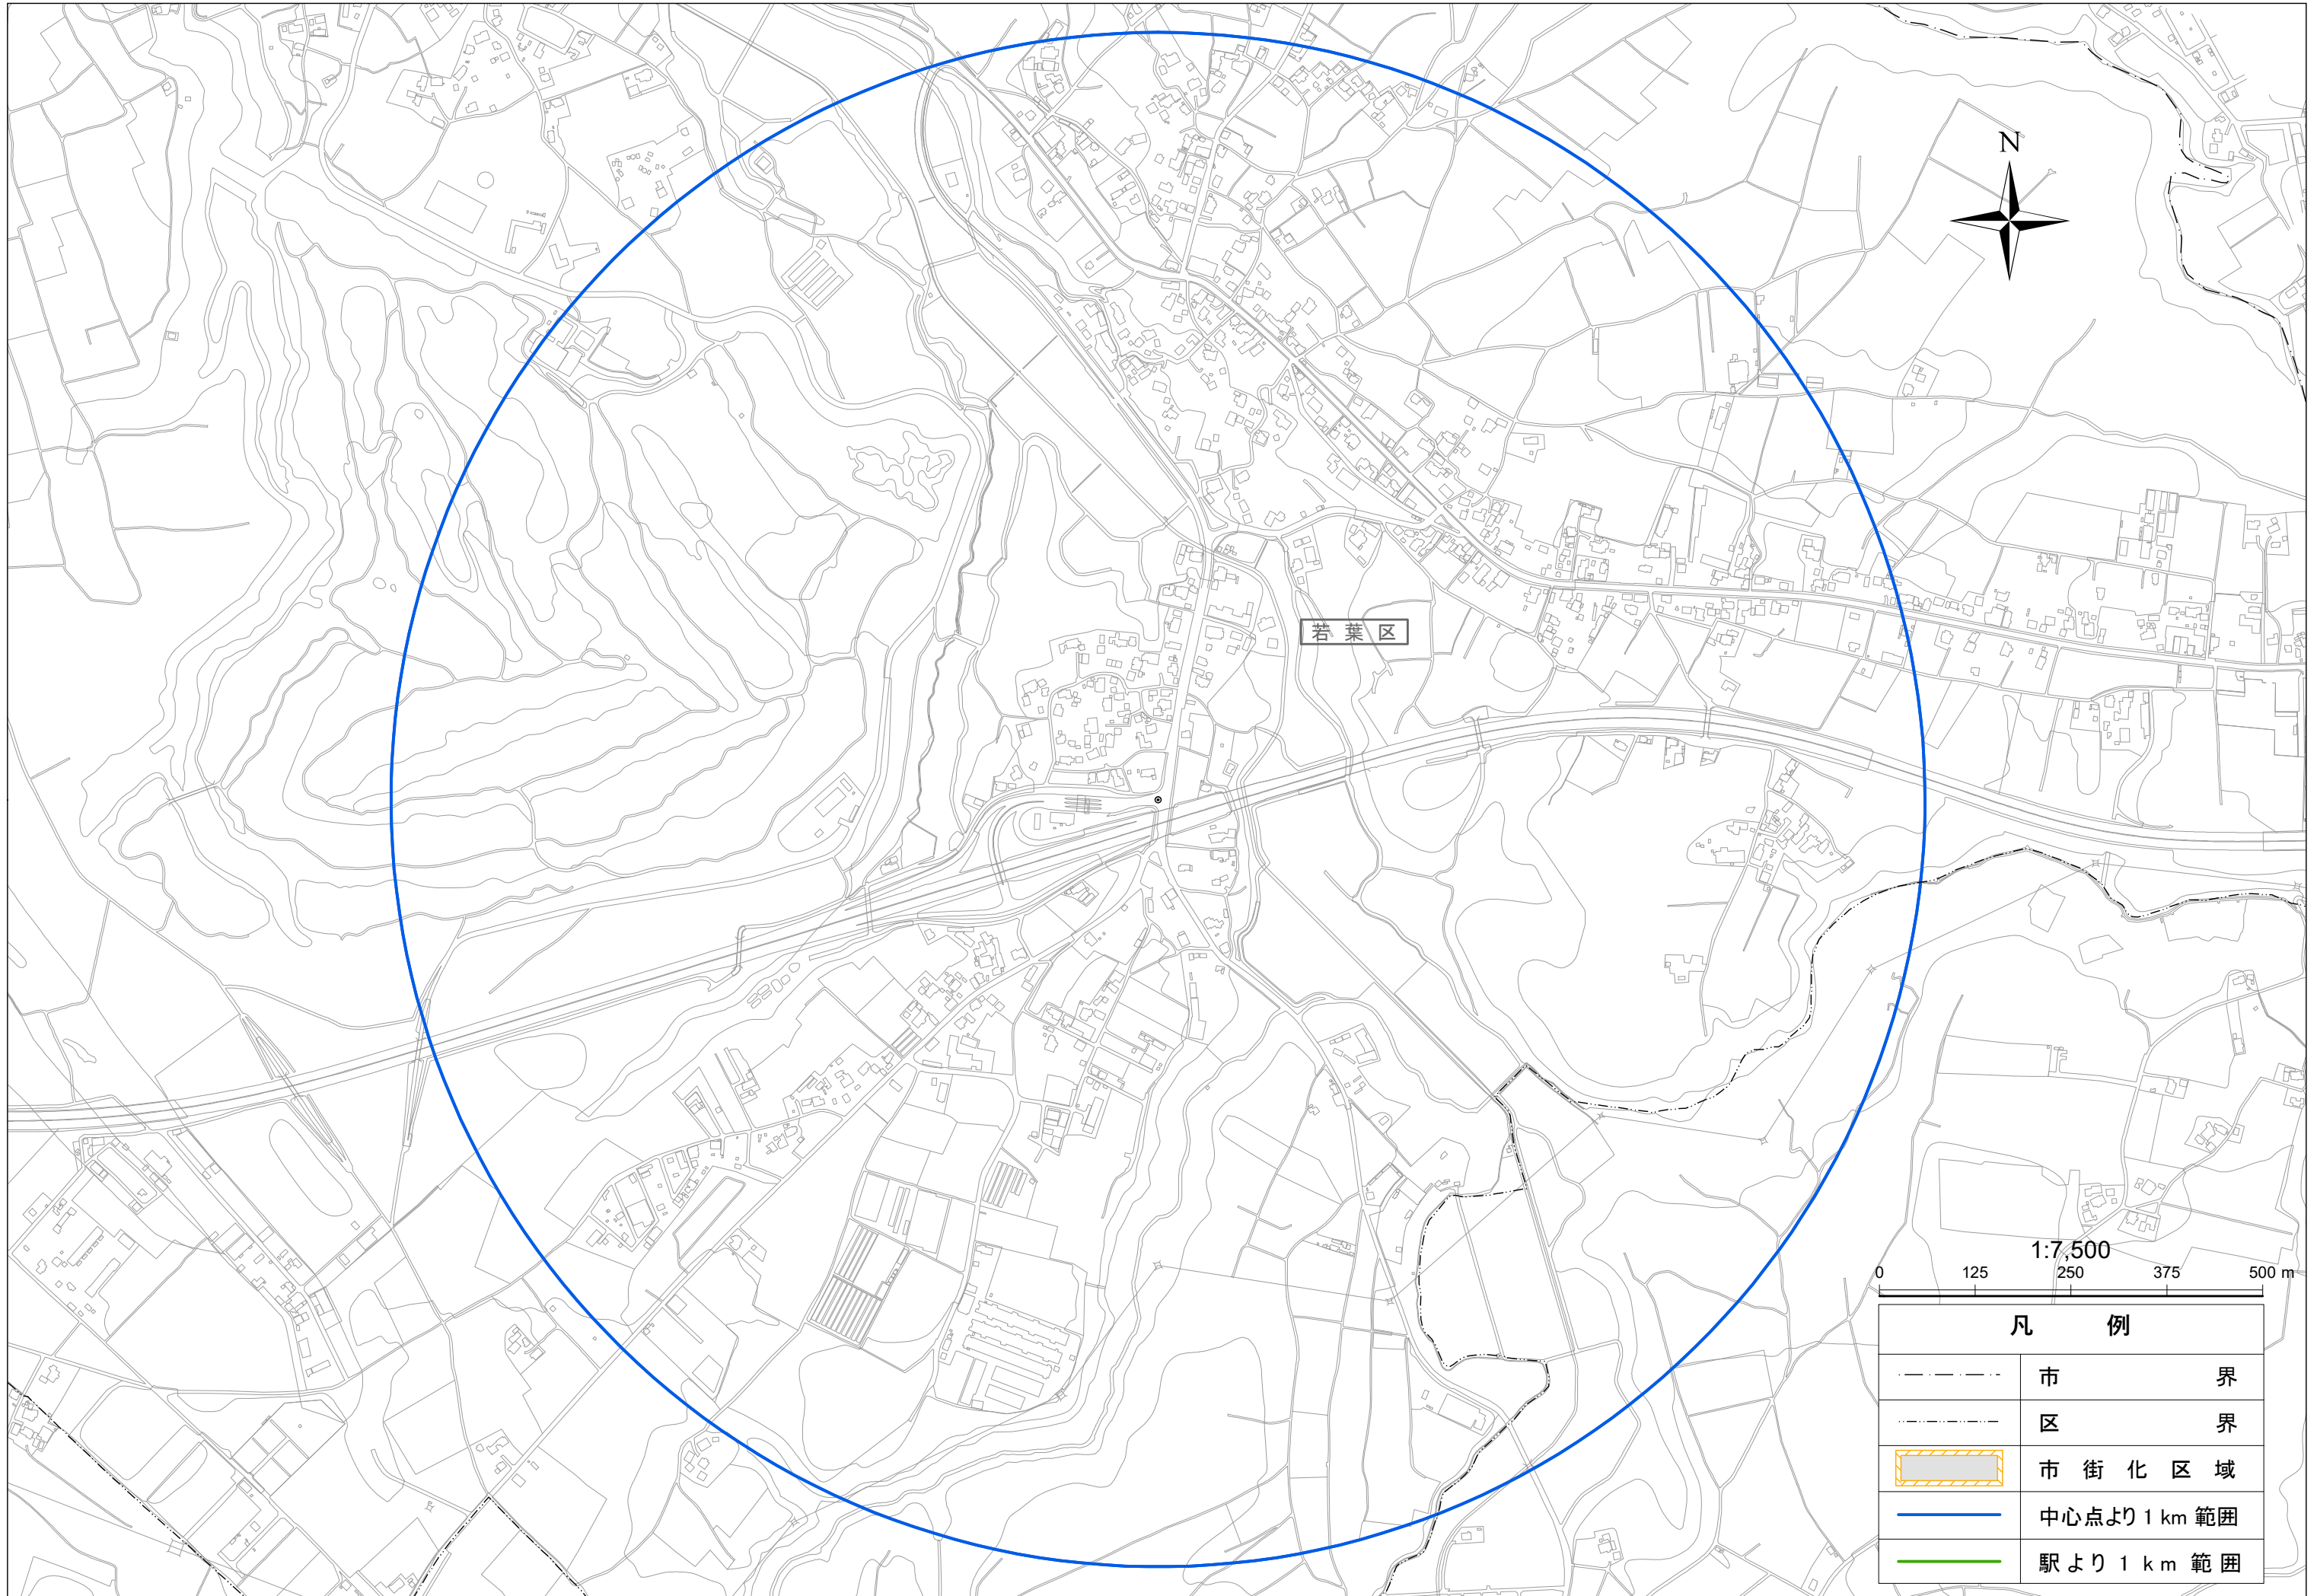

 
 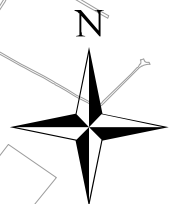



荻葉区



1:7,500

0 125 250 375 500 m

凡 例

	市 界
	区 界
	市 街 化 区 域
	中心点より 1 km 範囲
	駅より 1 km 範囲